


75 Tenter Road
Moulton Park Industrial Estate
Northampton
NN3 6AX

Tel: 01604 644944

Email: sales@m-maccess.co.uk

Web: www.m-maccess.co.uk

VAT No. 819 3680 06

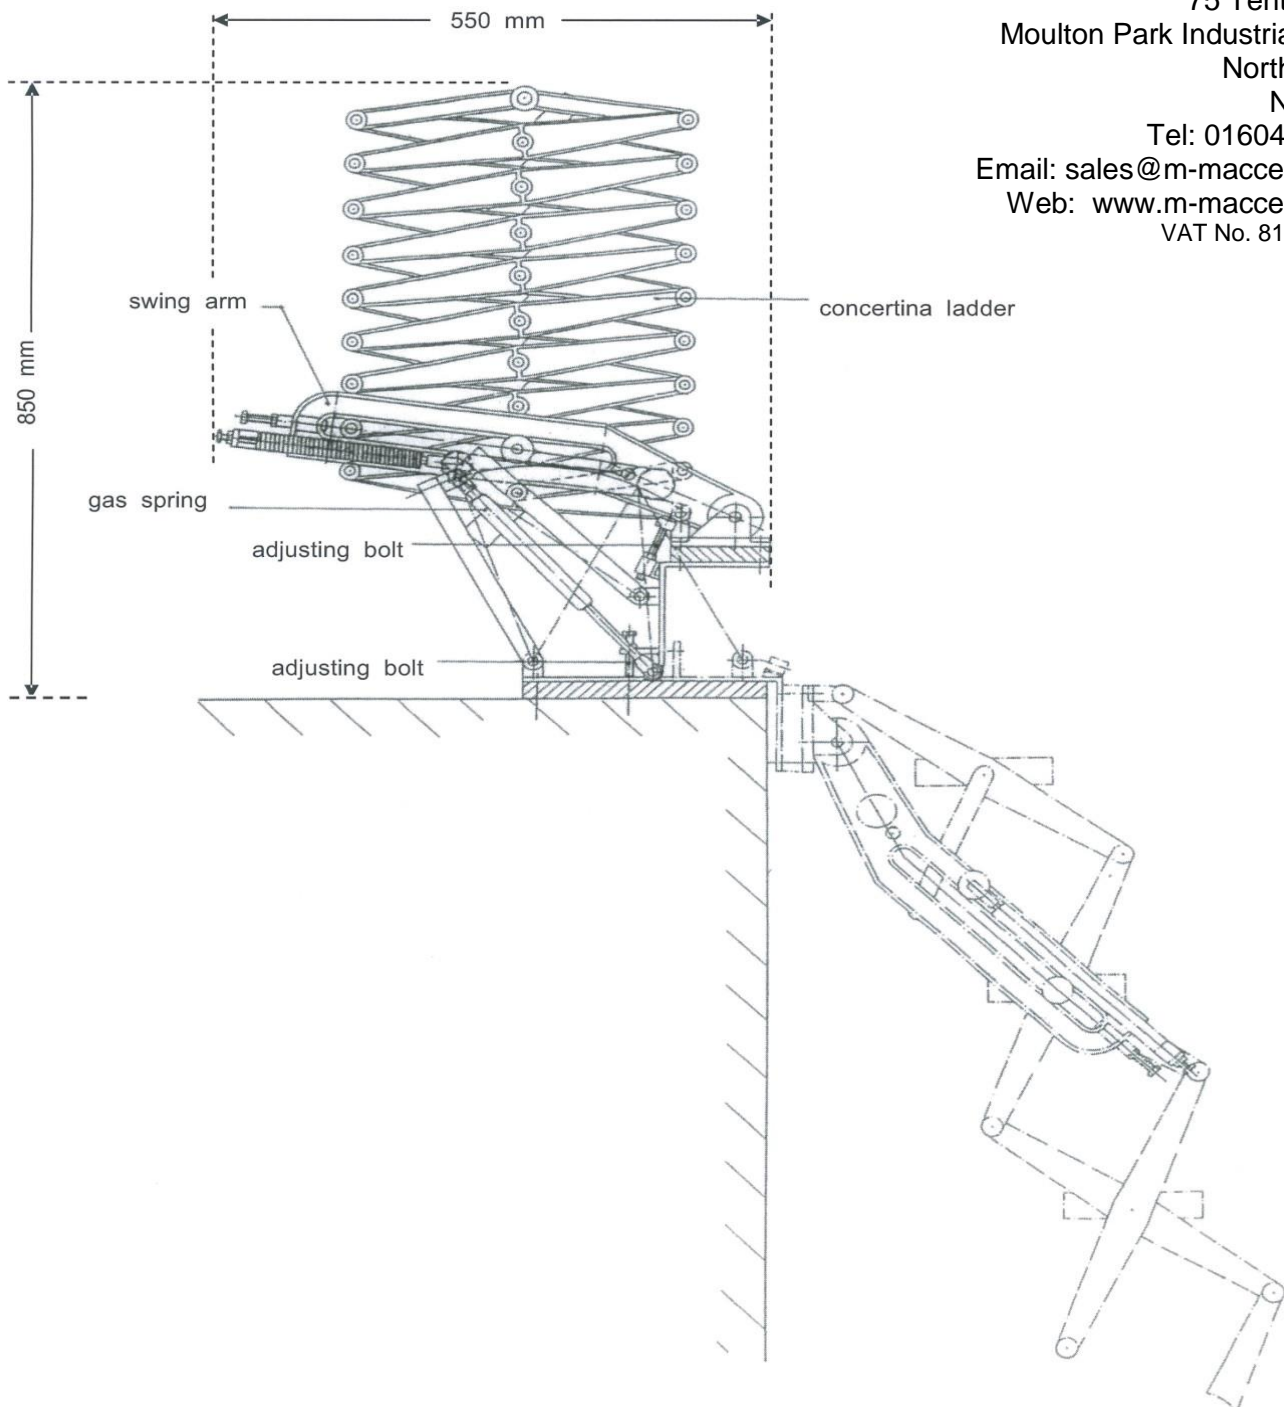

Model	Height (A)	Width (B)
FAL 4 V	650mm	600mm
FAL 5 V	700mm	600mm
FAL 6 V	750mm	600mm
FAL 7 V	800mm	600mm



Operating Instruction for FAL Ladder

1. Opening

- 1.1 If you have one, open cover.
- 1.2 Pull down Junior at ring pull by hand or by using the operating stick until it stands firmly on the ground.
- 1.3 Junior can be used now. Maximum loading per tread 200 Kgs, maximum loading per element 500 Kgs/m²
- 1.4 Keep a good hold at handrail or scissors when walking up or down.
- 1.5 We recommend to walk up forward and walk down backward.

2. Closing

- 2.1 Push Junior upward by hand or using the operating stick and swing up to endposition. Take care not to squeeze between scissors and treads
- 2.2 Close cover, if you have one
- 2.3 Remove operating stick from ring pull

3. Maintenance:

- 3.1 Check if all screws, nuts and safety parts are tight
- 3.2 Oil or grease all moving parts regularly.

Safety device:

It is advisable to fit a 3-sided guard rail around the opening where any loft ladder is being used.

